

Ultrasonic sensor

UB300-18GM40-E5-V1

- Short design, 40 mm
- Function indicators visible from all directions
- Switch output
- 5 different output functions can be set
- Program input
- Temperature compensation


Single head system







Dimensions

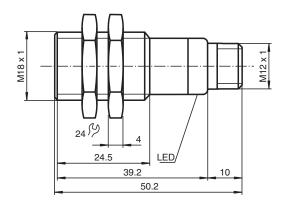

Technical Data

General specifications	
Sensing range	35 300 mm
Adjustment range	50 300 mm
Dead band	0 35 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 390 kHz
Response delay	approx. 50 ms
Indicators/operating means	
LED green	Power on
LED yellow	indication of the switching state flashing: program function object detected


Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Release date: 2021-02-25 Date of issue: 2021-02-25 Filename: 220357_eng.pdf

Technical Data		
LED red		solid red: Error red, flashing: program function, object not detected
Electrical specifications		
Operating voltage	U_B	10 30 V DC , ripple 10 % _{SS}
No-load supply current	I_0	≤ 20 mA
Input		
Input type		1 program input operating distance 1: -U _B +1 V, operating distance 2: +6 V +U _B input impedance: > 4,7 k Ω program pulse: \geq 1 s
Output		
Output type		1 switching output E5, PNP NO/NC, programmable
Rated operating current	l _e	200 mA , short-circuit/overload protected
Default setting		Switch point A1: 50 mm Switch point A2: 300 mm
Voltage drop	U_{d}	≤3 V
Repeat accuracy		≤1 %
Switching frequency	f	≤13 Hz
Range hysteresis	Н	1 % of the set operating distance
Temperature influence		± 1.5 % of full-scale value
Compliance with standards and directives		
Standard conformity		
Standards		EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
Approvals and certificates		
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		CCC approval / marking not required for products rated ≤36 V
Ambient conditions		
Ambient temperature		-25 70 °C (-13 158 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		
Connection type		Connector M12 x 1 , 4-pin
Degree of protection		IP67
Material		
Housing		brass, nickel-plated
Transducer		epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT
Mass		25 g

Connection

 Standard symbol/Connections: (version E5, pnp)



Core colours in accordance with EN 60947-5-2.

Connection Assignment




Wire colors in accordance with EN 60947-5-2

1 BN (brown) 2 WH (white) 3 BU (blue) 4 BK (black)


Characteristic Curve

Characteristic response curve

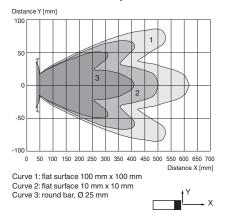


Programming

Programmable output modes

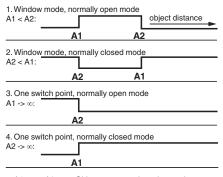

5. A1 -> ∞, A2 -> ∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

 Accessories





Accessories OMH-04 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm **BF 18** Mounting flange, 18 mm BF 18-F Plastic mounting adapter, 18 mm BF 5-30 Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm V1-G-2M-PVC Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey V1-W-2M-PUR Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey UVW90-K18 Ultrasonic -deflector M18K-VE Plastic nuts with centering ring for the vibration-free mounting of cylindrical sensors

Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Set target to far switching point
- TEACH-IN switching point A2 with +U_B

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Set target to far switching point
- TEACH-IN switching point A1 with -U_B

TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B

TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U_B

TEACH-IN detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_R
- TEACH-IN switching point A2 with +U_B

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

Installation Conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.