


# Ultrasonic sensor UB250-F12P-EP-V15

- Switching point adjustment via potentiometer
- Selectable sound lobe width
- Synchronization options
- Very small unusable area
- Push-pull output
- Temperature compensation

Ultrasonic direct detection sensor



### Dimensions

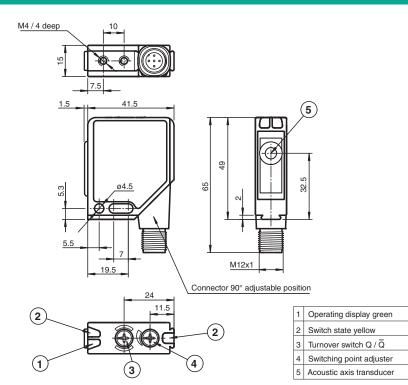

# Technical Data

### General specifications

Sensing range	20 250 mm
Adjustment range	25 250 mm
Dead band	0 20 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 400 kHz
Response delay	approx. 20 ms
Indicators/operating means	
LED green	Operating display
LED yellow	switch output

USA: +1 330 486 0001 G fa-info@us.pepperl-fuchs.com fa

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com



### UB250-F12P-EP-V15

# Ultrasonic sensor

Technical Data			
LED red		solid: stop plate switch point adjuster flashing: error	
Electrical specifications			
Operating voltage	UB	10 30 V DC , ripple 10 %ss	
No-load supply current	I <sub>0</sub>	≤ 25 mA	
Input/Output			
Synchronization		1 synchronous connection, bi-directional 0-level: $-U_B+1 V$ 1-level: $+4 V+U_B$ input impedance: > 12 k $\Omega$ synchronization pulse: > 100 µs, synchronization interpulse period: > 2 ms	
Synchronization frequency			
Common mode operation		max. 200 Hz	
Multiplex operation		$\leq$ 200/n Hz, n = number of sensors	
Input			
Input type		1 input for sound lobe adjustment small sound beam: $-U_B \dots +1 V$ wide sound beam: $+4 V \dots +U_B$ or open input input impedance: $> 10 k\Omega$ switching delay: 1 s	
Output			
Output type		Push-pull output, short-circuit protected, reverse polarity protected	
Rated operating current	l <sub>e</sub>	200 mA , short-circuit/overload protected	
Default setting		Switching point: 250 mm output behavior: NO contact	
Voltage drop	$U_d$	≤ 3 V	
Repeat accuracy		≤1 %	
Switching frequency	f	20 Hz	
Range hysteresis	Н	1 % of the set operating distance	
Temperature influence		± 1.5 % of full-scale value	
Compliance with standards and directives			
Standard conformity			
Standards		EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012	
Approvals and certificates			
UL approval		cULus Listed, General Purpose	
CSA approval		cCSAus Listed, General Purpose	
Ambient conditions			
Ambient temperature		-15 70 °C (5 158 °F)	
Storage temperature		-40 85 °C (-40 185 °F)	
Mechanical specifications			
Connection type		Connector M12 x 1 , 5-pin	
Degree of protection		IP54	
Material			
Housing		Frame: nickel plated, die cast zinc, Laterals: glass-fiber reinforced plastic PC	
Transducer		epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT	
Mass		60 g	

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Get

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

2

### Connection

Standard symbol/Connections: (version EP, pnp/npn)

		į.	(BN)	+ U <sub>p</sub>
		2	(WH)	Beam input
U		5	(GY)	Synchronous
		4	(BK)	Switch output
Ľ	3	(BU) <b>5</b>	- 11	

Core colours in accordance with EN 60947-5-2.

# **Connection Assignment**




Wire colors in accordance with EN 60947-5-2


1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

### **Characteristic Curve**

### Characteristic response curve

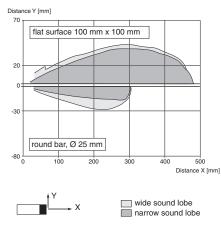

### Switching output function

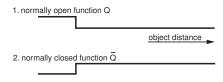

# Accessories

Release date: 2020-05-23 Date of issue: 2021-02-05 Filename: 202069\_eng.pdf

OMH-K01

dove tail mounting clamp

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"



### Accessories

	ОМН-К02	dove tail mounting clamp
	ОМН-К03	dove tail mounting clamp
0	OMH-01	Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm
with the second	OMH-06	Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm
La	OMH-MLV12-HWG	Mounting bracket for series MLV12 sensors
	OMH-MLV12-HWK	Mounting bracket for series MLV12 sensors
	V15-G-2M-PVC	Female cordset single-ended M12 straight A-coded, 5-pin, PVC cable grey

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

4

# **Additional Information**

### Synchronisation

To suppress mutual influence, the sensor is equipped with a synchronisation connection. If this is not activated, the sensor works with an internally generated clock. Synchronisation of multiple sensors can be achieved in the following ways.

#### External synchronisation

The sensor can be synchronized by external application of a square wave voltage. A synchronisation impulse on the synchronisation input leads to the execution of one measurement cycle. The impulse width must be larger than 100  $\mu$ s. The measurement cycle starts with the falling flank. A low level > 1 sec or an open synchronisation input puts the sensor in normal mode. A high level on the synchronisation input deactivates the sensor.

Two operational modes are possible

- 1. Multiple sensors are controlled using the same synchronisation signal. The sensors work in synch.
- 2. The synchronisation impulses are cyclically fed to only one sensor at a time. The sensors work in multiplex mode.

### Autosynchronisation

The synchronisation connections of up to 10 sensors are connected together. These sensors then work in multiplex mode after power is switched on. The activation delay is increased corresponding to the numer of synchronised sensors.

#### Note:

If the synchronisation option is not used, the sync. input should be connected to ground (0V), or the sensor connected using a V1 connector cable (4-pin).

#### Selection of beam characteristics

By switching the beam input, the activation characteristics of the ultrasound sensor can be selected. If the beam input is open or connected to  $+U_B$ , the sensor works with a wide ultrasonic cone. A beam input connected to  $-U_B$  causes the sensor to work with a narrower ultrasonic cone. This setting is preferred when an object in the vicinity of the sensor is close to the ultrasonic beam, and should be suppressed. The characteristic of the ultrasonic cone can be changed during sensor operation. Switching the sound cone characteristics becomes active one second after the change to the signal level at the beam input.

#### Setting the switch point

The ultrasonic sensor possesses a switch output, of which the switching point can be set simply and precisely using the built-in 12-position potentiometer. Using the switch  $Q / \overline{Q}$  which is also easy to find on the upper side of the sensor, the effective direction of the switching output can be selected.

There are two different output functions which can be selected

- 1. one switching point, normally open
- 2. one switching point, normally closed

#### LED display

	Opening function (Q\) Closing function (Q)		
LED green:	Power On		
LED yellow:	Switch state Object outside switching area, or no object	Switch state Object detected in switching area	
LED red	Potentiometer for setting of switch point at "limit"		
LED red flashing	Ultrasonic error		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information

5