

# Ultrasonic sensor UB1000-18GM75-E01-V15

- 2 switch outputs
- Selectable sound lobe width
- Program input
- Temperature compensation
- Very small unusable area


# Single head system







# **Dimensions**

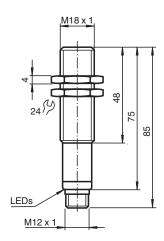


# **Technical Data**

General specifications	
Sensing range	70 1000 mm
Adjustment range	90 1000 mm
Dead band	0 70 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 255 kHz
Response delay	approx. 125 ms
Indicators/operating means	
LED yellow	indication of the switching state flashing: program function object detected

Technical Data		
LED red		"Error", object uncertain in program function: No object detected
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC , ripple 10 %ss
No-load supply current	I <sub>0</sub>	≤ 50 mA
Input		
Input type		1 program input, operating range 2: +4 V +U <sub>B</sub> input impedance: > 4.7 k $\Omega$ ; program pulse: $\geq$ 1 s
Output		
Output type		2 switch outputs NPN, normally open/closed
Rated operating current	l <sub>e</sub>	2 x 100 mA , short-circuit/overload protected
Voltage drop	$U_d$	≤3 V
Repeat accuracy		≤1 %
Switching frequency	f	max. 3 Hz
Range hysteresis	Н	1 % of the set operating distance
Temperature influence		± 1.5 % of full-scale value
Compliance with standards and directives		
Standard conformity		
Standards		EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012
Approvals and certificates		
UL approval		cULus Listed, General Purpose
CSA approval		cCSAus Listed, General Purpose
CCC approval		CCC approval / marking not required for products rated ≤36 V
Ambient conditions		
Ambient temperature		-25 70 °C (-13 158 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		
Connection type		Connector plug M12 x 1 , 5-pin
Degree of protection		IP67
Material		
Housing		brass, nickel-plated
Transducer		epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT
Mass		60 g
Factory settings		
Output 1		Switching point: 90 mm output function: Switch point operation mode output behavior: NO contact
Output 2		Switching point: 1000 mm output function: Switch point operation mode output behavior: NC contact
Beam width		wide

# Connection

Standard symbol/Connections: (version E01, npn)



Core colours in accordance with EN 60947-5-2.

# **Connection Assignment**




Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)


# **Characteristic Curve**

### Characteristic response curve

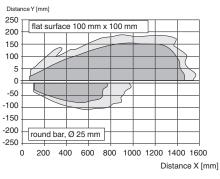



## Programmed switching output function



Switch output 1, (N.O.) Detection of object presence Switch point 1 -> ∞: Switch output 2, (N.C.)
Detection of object presence Switch point 2 ->  $\infty$ :

# **Accessories**

Release date: 2021-02-25 Date of issue: 2021-02-25 Filename: 204533\_eng.pdf

UB-PROG3	Programming unit
OMH-04	Mounting aid for round steel ø 12 mm or sheet 1.5 mm 3 mm





# **Accessories BF 18** Mounting flange, 18 mm BF 18-F Plastic mounting adapter, 18 mm BF 5-30 Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm UVW90-K18 Ultrasonic -deflector M18K-VE Plastic nuts with centering ring for the vibration-free mounting of cylindrical sensors V15-G-2M-PVC Female cordset single-ended M12 straight A-coded, 5-pin, PVC cable grey

**5** PEPPERL+FUCHS

The sensor features two switch outputs with one programmable switch point, each. Programming the switch points is done by applying the supply voltage -U<sub>B</sub> (switch output 1) or +U<sub>B</sub> (switch output 2) to the Teach-In input. The supply voltage must be applied to the Teach-In input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

If a programming adapter UB-PROG3 is used for the programming procedure, button A1 is assigned to -UB and button A2 is assigned to +UB.

#### **Programming switch ouputs**

#### Switch point for switch output 1

- 1. Place the target at the desired switch point position of switch output 1
- 2. Program the switch point by applying -U<sub>B</sub> to the Teach-In input (corresponding yellow LED flashes)
- 3. Disconnect the Teach-In input from -UB to save the switch point

#### Switch point for switch output 2

- 1. Place the target at the desired switch point position of switch output 2
- 2. Program the switch point by applying  $+U_B$  to the Teach-In input (corresponding yellow LED flashes)
- 3. Disconnect the Teach-In input from +U<sub>B</sub> to save the switch point

#### Programming detection of object presence

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U<sub>B</sub> to the Teach-In input (red LED flashes)
- 3. Disconnect the Teach-In input from -UB
- 4. Apply +UB to the Teach-In input (red LED flashes)
- 5. Disconnect the Teach-In input from +UB


Note: Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

#### Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

#### 1. Small angle sound cone

- switch off the power supply
- connect the Teach-In input wire to -UR
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range





### 2. Wide angle sound cone

- switch off the power supply
- connect the Teach-In input wire with +U<sub>B</sub>
- switch on the power supply
- the red LED double-flashes with a long pause before the next.
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-In input wire from +U<sub>B</sub> and the changing is saved



## **Factory Setting**

# Factory settings

See technical data.

### Indication

The sensor provides LEDs to indicate various conditions.

www.pepperl-fuchs.com

#### Ultrasonic sensor

	Red LED	Yellow LED 1	Yellow LED 2
During Normal operation			
Proper operation	Off	Switching state output 1	Switching state output 2
Interference (e.g. compressed air)	On	remains in previous state	remains in previous state
Programming of output 1			
Object detected	Off	Flashes	Off
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off
Programming of output 2			
Object detected	Off	Off	Flashes
No object detected	Flashes	Off	Off
Object uncertain (programming invalid)	On	Off	Off

# **Installation Conditions**

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.