




## Ultrasonic sensor UB800-18GM40A-E4-610MM-Y

- Short design, 40 mm
- Function indicators visible from all directions
- Switch output
- 5 different output functions can be set
- Program input
- Temperature compensation
- Customer-specific cable length
- Deutsch 4-pin, DT04 connector

Single head system



### Dimensions

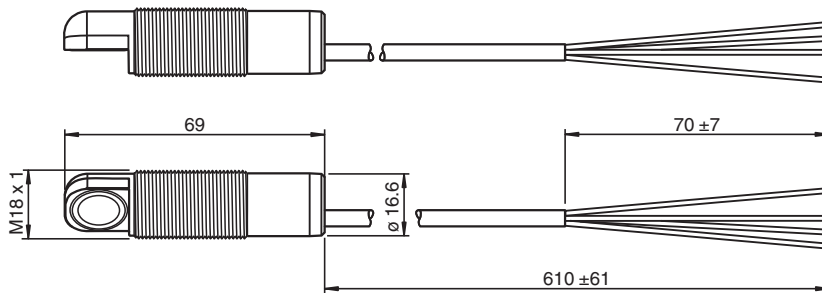

### Technical Data

General specifications	
Sensing range	50 ... 800 mm
Adjustment range	70 ... 800 mm
Dead band	0 ... 50 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 255 kHz
Response delay	approx. 100 ms
Indicators/operating means	
LED green	Power on
LED yellow	indication of the switching state flashing: program function object detected
LED red	solid red: Error red, flashing: program function, object not detected
Electrical specifications	
Operating voltage	$U_B$ 10 ... 30 V DC , ripple 10 % <sub>SS</sub>
No-load supply current	$I_0$ ≤ 20 mA
Input	

Release date: 2021-08-02 Date of issue: 2021-08-02 Filename: 70126202\_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group  
www.pepperl-fuchs.com

USA: +1 330 486 0001  
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111  
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091  
fa-info@sg.pepperl-fuchs.com


 PEPPERL+FUCHS

## Technical Data

Input type	1 program input operating distance 1: $-U_B \dots +1 \text{ V}$ , operating distance 2: $+6 \text{ V} \dots +U_B$ input impedance: $> 4,7 \text{ k}\Omega$ program pulse: $\geq 1 \text{ s}$	
<b>Output</b>		
Output type	1 switching output E4, NPN, NO/NC, programmable	
Rated operating current	$I_e$	200 mA , short-circuit/overload protected
Default setting	Switch point A1: 70 mm Switch point A2: 800 mm	
Voltage drop	$U_d$	$\leq 3 \text{ V}$
Repeat accuracy	$\leq 1 \%$	
Switching frequency	$f$	$\leq 4 \text{ Hz}$
Range hysteresis	$H$	1 % of the set operating distance
Temperature influence	$\pm 1.5 \%$ of full-scale value	
<b>Compliance with standards and directives</b>		
Standard conformity		
Standards	EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012	
<b>Approvals and certificates</b>		
CCC approval	CCC approval / marking not required for products rated $\leq 36 \text{ V}$	
<b>Ambient conditions</b>		
Ambient temperature	$-25 \dots 70 \text{ }^\circ\text{C}$ ( $-13 \dots 158 \text{ }^\circ\text{F}$ )	
Storage temperature	$-40 \dots 85 \text{ }^\circ\text{C}$ ( $-40 \dots 185 \text{ }^\circ\text{F}$ )	
<b>Mechanical specifications</b>		
Connection type	cable	
Degree of protection	IP67	
Material		
Housing	brass, nickel-plated	
Transducer	epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT	
<b>Cable</b>		
Sheath diameter	4.8 mm	
Bending radius	$> 38.4 \text{ mm}$ , fixed $> 72 \text{ mm}$ , moving	
Material	PVC	
Core cross-section	$4 \times 0.5 \text{ mm}^2$	
Length	$L$	610 mm
Mass	65 g	
<b>General information</b>		
Scope of delivery	Deutsch connector DT04-4P-CE01	

## Connection


**Standard symbol/Connections:**  
(version E4, npn)



Core colours in accordance with EN 60947-5-2.

## Characteristic Curve


### Characteristic response curve

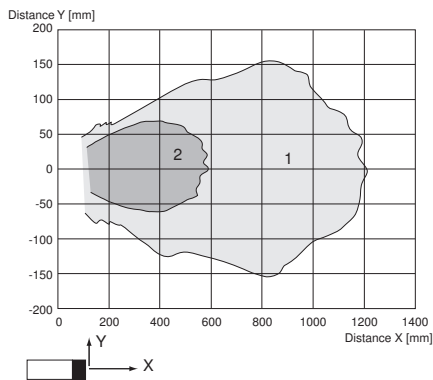

Curve 1: flat surface 100 mm x 100 mm  
Curve 2: round bar, Ø 25 mm

## Programming

### Programmable output modes

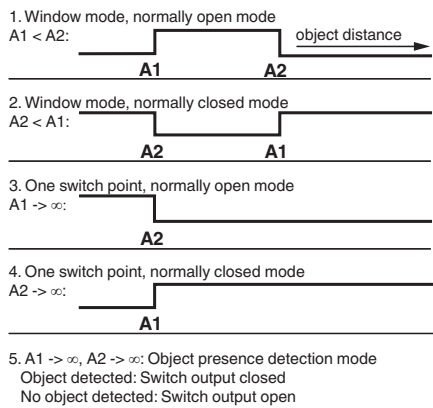

## Accessories

	<b>UB-PROG2</b>	Programming unit
	<b>OMH-04</b>	Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm
	<b>BF 18</b>	Mounting flange, 18 mm
	<b>BF 18-F</b>	Plastic mounting adapter, 18 mm
	<b>BF 5-30</b>	Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm
	<b>M18K-VE</b>	Plastic nuts with centering ring for the vibration-free mounting of cylindrical sensors

Release date: 2021-08-02 Date of issue: 2021-08-02 Filename: 70126202\_eng.pdf

**Teach-In**

**Adjusting the switching points**

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Five different output functions can be set

1. Window mode, normally-open function
2. Window mode, normally-closed function
3. one switching point, normally-open function
4. one switching point, normally-closed function
5. Detection of object presence

**TEACH-IN window mode, normally-open function**

- Set target to near switching point
- TEACH-IN switching point A1 with  $-U_B$
- Set target to far switching point
- TEACH-IN switching point A2 with  $+U_B$

**TEACH-IN window mode, normally-closed function**

- Set target to near switching point
- TEACH-IN switching point A2 with  $+U_B$
- Set target to far switching point
- TEACH-IN switching point A1 with  $-U_B$

**TEACH-IN switching point, normally-open function**

- Set target to near switching point
- TEACH-IN switching point A2 with  $+U_B$
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with  $-U_B$

**TEACH-IN switching point, normally-closed function**

- Set target to near switching point
- TEACH-IN switching point A1 with  $-U_B$
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with  $+U_B$

**TEACH-IN detection of objects presence**

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with  $-U_B$
- TEACH-IN switching point A2 with  $+U_B$

**LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
<b>TEACH-IN switching point:</b>		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

Release date: 2021-08-02 Date of issue: 2021-08-02 Filename: 70126202\_eng.pdf